




The world's favourite lock

HSA6000 series

# Wirefree Yale HSA3045 Panic Button

(Yale part number: 663045001001)

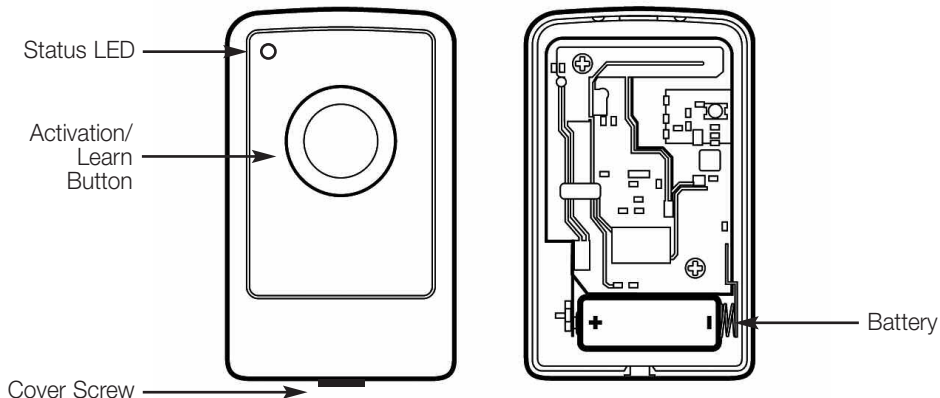

## Pack contents

- 1 x HSA3045 panic button
- 2 x wall plugs/cross head fixing screws
- 1 x 23A/MN21 12V alkaline battery

## Help button description

**Status LED:** Indicates activation and low battery condition.

**Activation/Learn button:** Used for activating the alarm and for learning-in.

**Cover screw:** Provides access to inside of panic button.

**Battery:** Battery compartment for 1 x 23A/MN21 12V alkaline battery.

## Specification

### EMC

Tested to EN 300 220-1 and ETS 300 683

### Environmental conditions

-10°C to 40°C, relative humidity 70% non-condensing

### Radio operation range

30m in a typical domestic installation. Can vary depending on building construction and RF environment.

### Radio

Microprocessor controlled 433.92MHz AM transmitter.

### Power supply

23A/MN21 12V alkaline miniature "lighter battery". 3 years typical domestic service life.

## Installation

Undo the cover screw and insert the battery. Please observe the battery polarity.

## Programming and testing

Program your panic button before installation and test afterwards. Please see your current system instruction book.

## Location

Locate the panic button taking into account the following points:

- Not clearly visible to an intruder
- Easily accessible
- Out of reach of children
- Not outdoors

## Mounting

The panic button can be used free standing or wall mounted. For wall mounting:

1. Break through the two knockouts in the inside of the rear case (where plastic is thinner).
2. Using the holes as template, drill holes in the wall surface and insert wall plugs if fixing into plaster or brick. Screw the rear case to the wall.
3. Replace the cover and tighten case screw.

## Using your help button

### Activate an Alarm

- Press and hold the red button for at least 2 seconds- LED will light momentarily and the alarm will be activated.

### Silence an Alarm

- Press and hold down the red button, after 10 seconds the LED will light momentarily for a second time and the alarm will be silenced.
- Please note that silencing the alarm with the panic button does not reset the system. If the alarm is armed prior to activation, the system will re-arm after being silenced with the panic button.
- The system will require a reset at the control unit after being silenced with the panic button.



The world's favourite lock  
[www.yalelock.com](http://www.yalelock.com)

